



SMART VISION SYSTEM

QUICK START SET UP


SMART VISION SYSTEM

QUICK START GUIDE




STEP 1 DVR WIRING

1 CONNECT DVR POWER

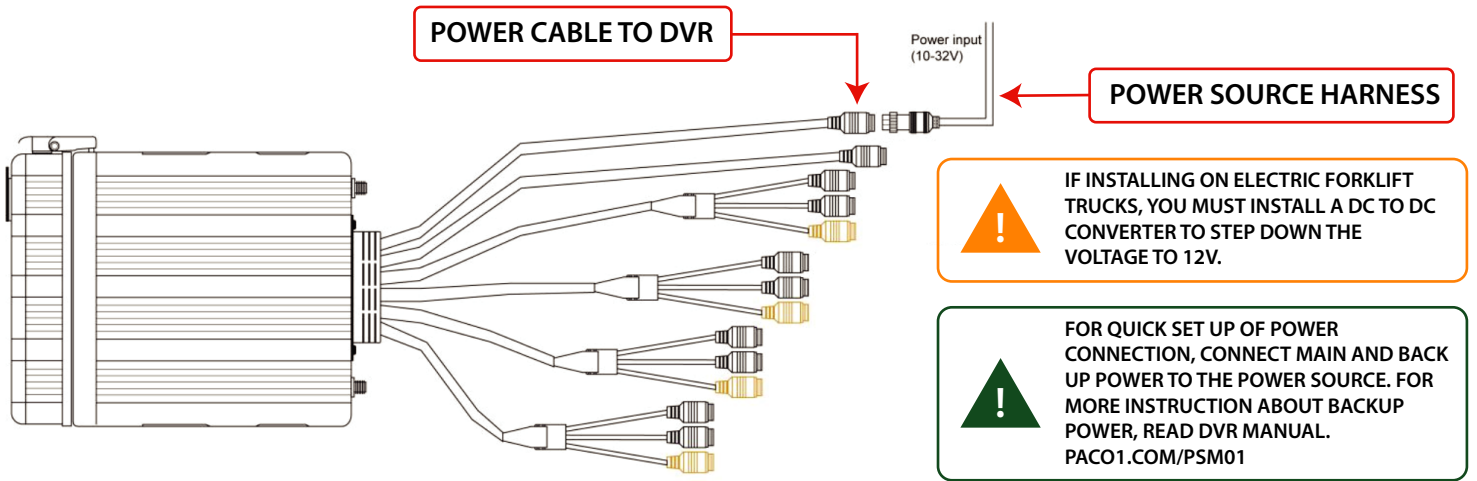


2 CONNECT MONITOR

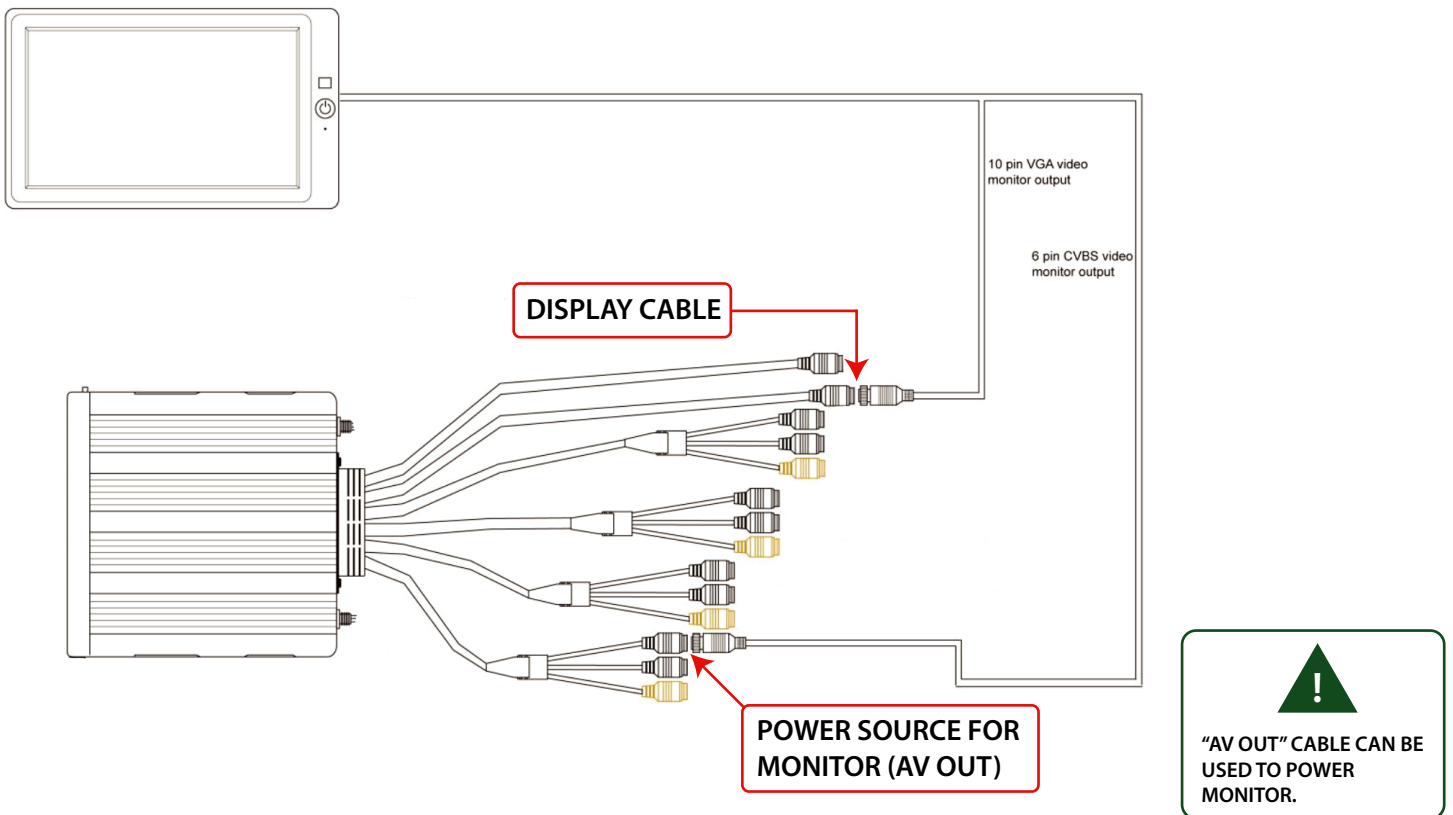


STEP 2 CONNECT CAMERAS


1 CONNECT AI CAMERA

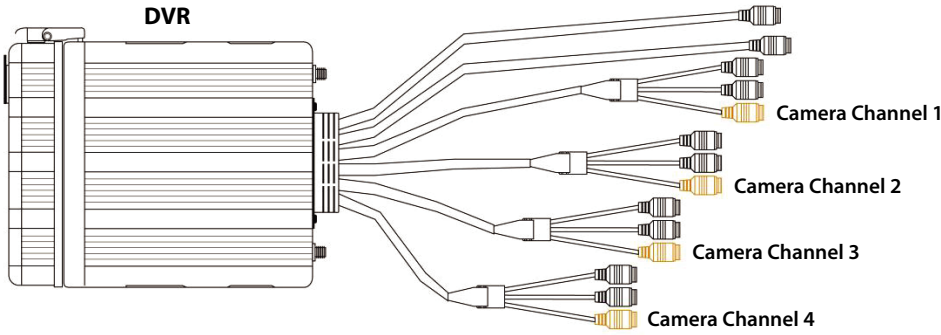

! THERE ARE 4 CHANNELS IN DVRs. ADDING OTHER 4 CHANNELS REQUIRED TO INSTALL A BOX CONNECTOR AND IP CAMERAS THAT ARE NOT INCLUDED IN SMART VISION KIT.

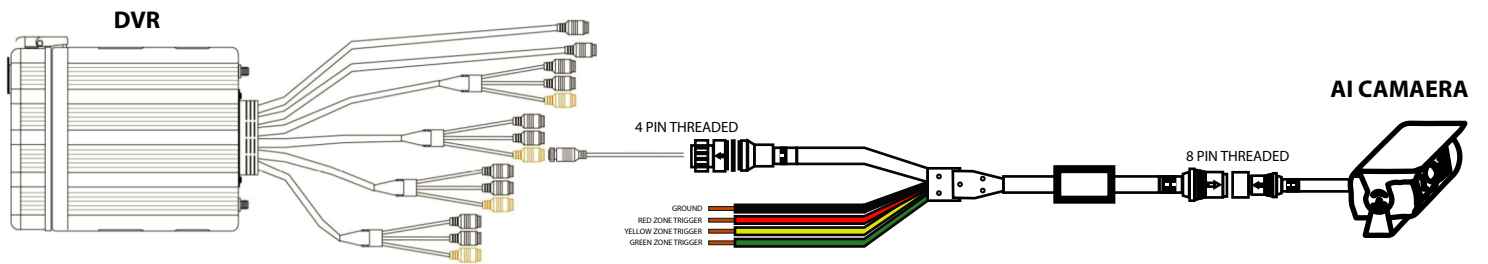

2 CONNECT FORK CAMERA

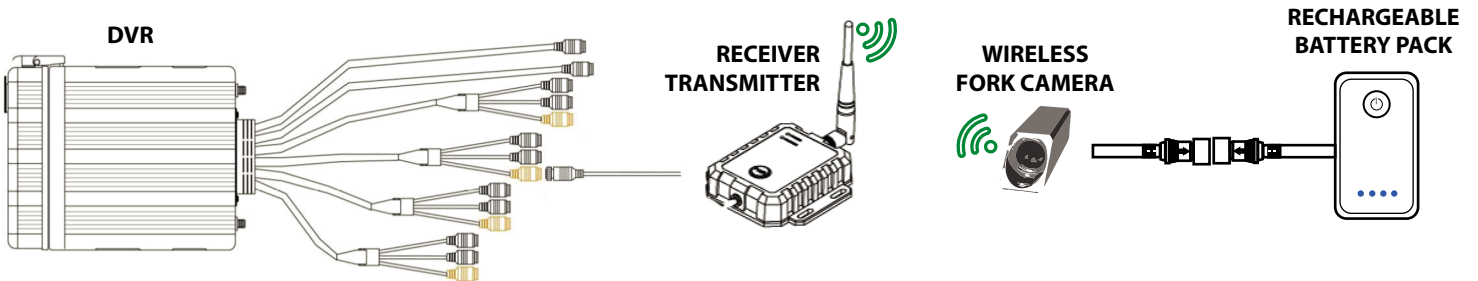

PAIRING WIRELESS CAMERA STEPS


- 1- CONNECT WIRELESS RECEIVER AND TURN ON DVR.
- 2- CONNECT RECEIVER TO 12V POWER. FOR SOME RECEIVER MODES
- 3- PRESS AND HOLD PAIR BUTTON IN WIRELESS RECEIVER UNTIL THE PAIRING LIGHT START FLASHING.
- 4- TURN ON THE CAMERA BY PRESSING THE POWER BUTTON IN THE RECHARGEABLE BATTERY PACK.

NOTE: PAIRING STEPS NEED TO BE DONE ONE TIME ONLY BETWEEN THE RECEIVER AND WIRELESS CAMERA


STEP 3 CONNECT TRIGGER OUTPUT WARNING DEVICES

1 CONNECT TRIGGERS


CONNECT RED ZONE

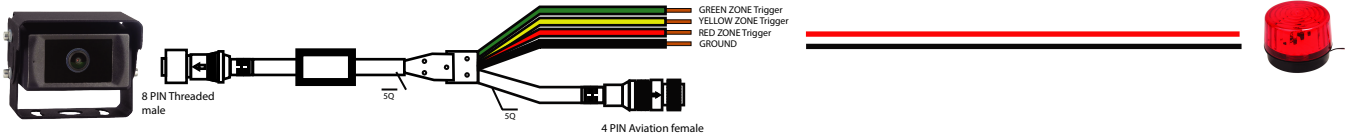

CONNECT YELLOW ZONE

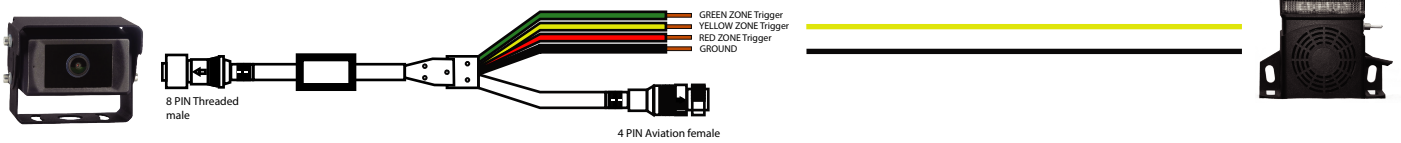

CONNECT GREEN ZONE

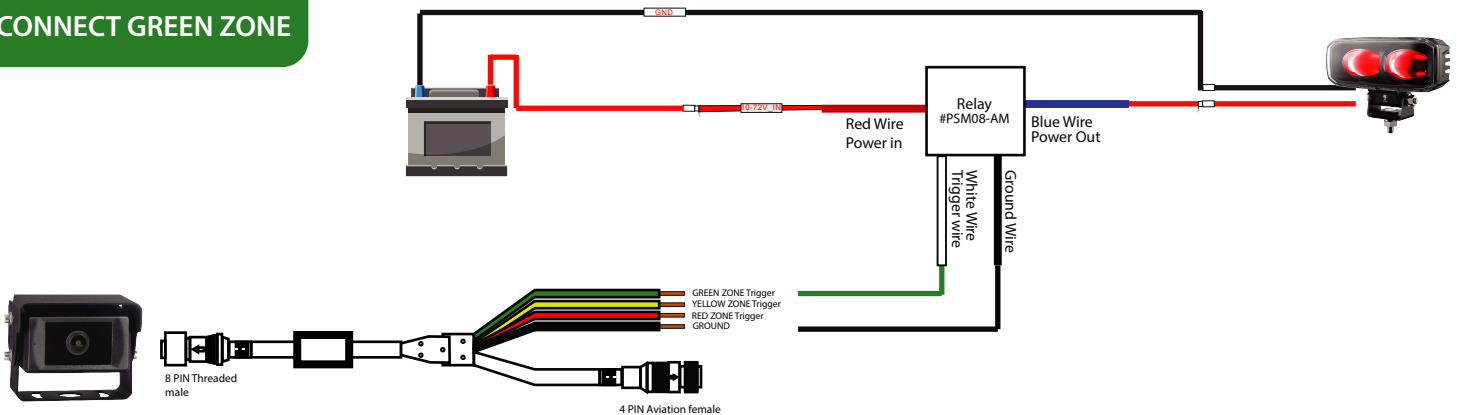

2 CONFIGURE COVERAGE AREA OF AI CAMERA

CONFIGURE COVERAGE AREA USING THE WIFI CALIBRATION TOOL VIA ANY DEVICE WITH A WEB BROWSER.




CONFIGURE AI CAMERA REQUIRES A WIFI CALIBRATION TOOL (PART# PSM06) AND AN EXTERNAL DEVICE SUCH AS PC/PHONE/TABLET. AI CAMERA CANNOT BE CALIBRATED FROM DVR.

A CONNECT CALIBRATION TOOL



CONNECTING CALIBRATION TOOL CABLE HARNESS WILL DISABLE TRIGGER WIRES. REMOVE CALIBRATION TOOL CABLE HARNESS AFTER CALIBRATING AI CAMERA

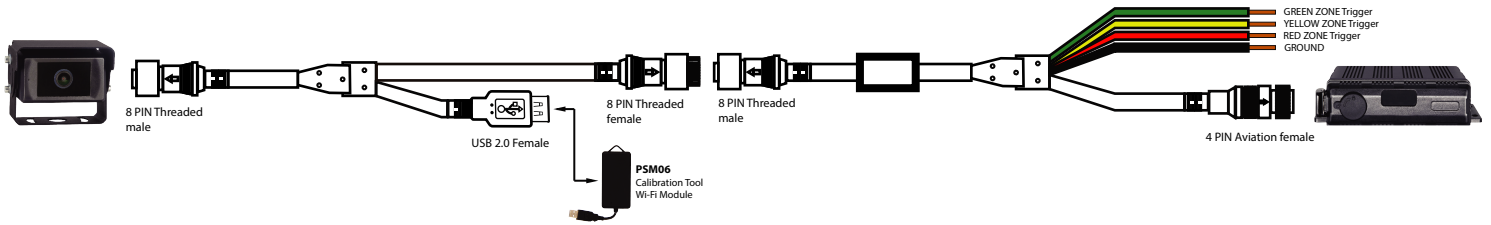


A FIND THE WIFI NETWORK OF CALIBRATION TOOL

GO TO DEVICE WI-FI SETTING (PC/PHONE/TABLET),


B CONNECT TO CALIBRATE TOOL WIFI

FIND AND CONNECT TO THE WIFI CALIBRATION TOOL DEVICE STARTING WITH 'ADAS - WIFI PASSWORD:88888888

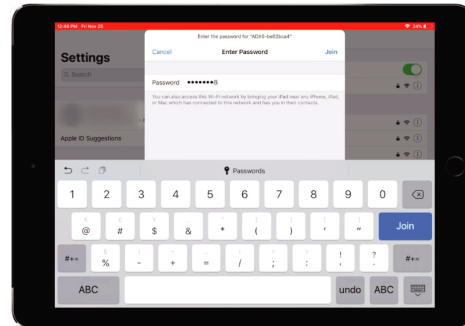


C GO TO URL 192.168.60.1:8080

OPEN ANY BROWSER AND ENTER THIS URL 192.168.60.1:8080
 USERNAME: admin
 PASSWORD: BLANK

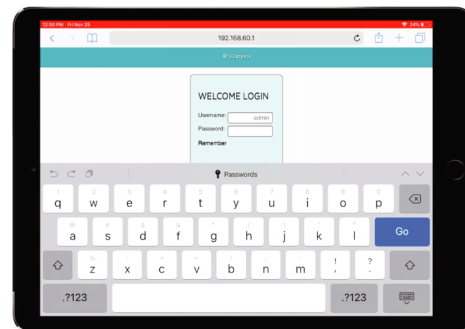

D MODIFY ZONES

MODIFY COVERAGE ZONES BY GRABBING AND ADJUSTING THE RESPECTIVE COLORED LINES. CONFIRM CHANGES. AI CAMERA IS UPDATED ONCE CONFIRMED.

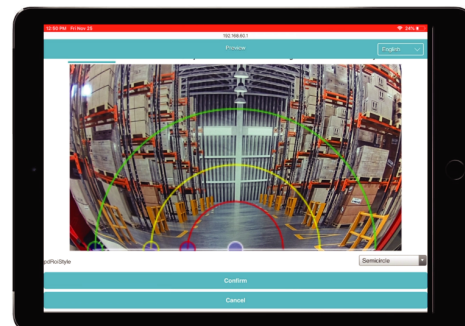


STEP 4 CONFIGURE DVR NETWORK

1 ACCESS SETTINGS

- TAP ON BOTTOM PART OF THE SCREEN
- TAP ON GEAR ICON
- ENTER USERNAME AND PASSWORD

DEFAULT USERNAME: admin
DEFAULT PASSWORD: 123 OR 88888888

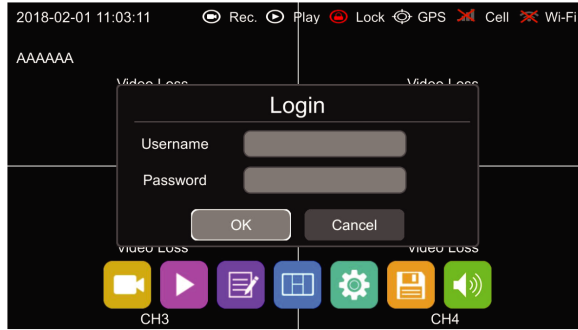


2 CONNECT TO WIFI

- AFTER ACCESSING THE SETTINGS
- TAP ON NETWORK
- TAP ON WIFI
- TAP ON SSID FIELD
- SELECT THE WIFI NETWORK
- ENTER THE WIFI NETWORK PASSWORD
- TAP OK



3 ENTER SERVER IP/DOMAIN AND PORT

- AFTER ACCESSING THE SETTINGS
- TAP ON NETWORK
- TAP ON SERVER
- TAP ON WIFI
- ENTER THE SERVER IP ADDRESS IN IP FIELD OR THE SERVER DOMAIN IN Server 1
- ENTER THE SERVER PORT
- TAP OK

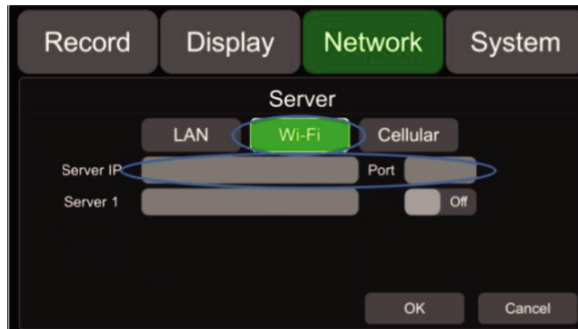

CONTACT YOUR ADMIN OR SALES REP. TO OBTAIN A SERVER IP/DOMAIN

4 NETWORK STATUS

- AFTER ACCESSING THE SETTINGS
- TAP ON NETWORK
- TAP ON STATUS



AFTER CONNECTING TO WIFI NETWORK YOU CAN ACCESS DVR SETTINGS VIA A BROWSER, BY ENTERING DVR IP:8081. IN THIS SCREENSHOT AT RIGHT, THE DVR IP IS 192.168.32.215. ENTER IN THE BROWSER: 192.168.32.215:8081

